



Congratulations and thank you for your purchase of the Audio Note Conquerer stereo power amplifier. The Conquerer is a Pure Class A stereo singled ended valve amplifier that uses the highly regarded 300B directly heated triode valve. The Conquerer produces a level of performance that is radically superior to current designs and was specifically designed for sonic performance rather than technical specifications. It also fulfills all Level 3 criteria.

- Pure Class A operation.
- Zero negative feedback.
- Single ended output stage.
- Valve rectification.
- Directly heated Triode.
- Materials and component quality.

This Level 3 amplifier features Audio Note copper and silver wiring and Audio Note capacitors.

UNPACKING AND INSTALLATION



This amplifiers is shipped without the valves installed. It is necessary to install the valves first. It is *essential* that the valves are installed correctly or *serious damage that is not covered by the warranty will result. We recommend that your dealer does this for you.*

Installing the valves

Please take care when unpacking the amplifier as it is fairly heavy and place on a suitable clean space (table or floor). We recommend that you store the packaging materials in case the unit requires shipping at a later date.

Carefully unwrap all the valves. You will find 2 x 6SN7WGTA, 2 x 300B and 1 x 5U4G valves.

Looking from the front of the amplifier, the first valves to plug in is the 6SN7WGTA valves, which goes into the two valve bases at the front of the amplifier.

Inspect the locating pin on the bottom center of the valve and align with the valve base (the locating pin can only go in one way round due to a locating spigot) and with gentle but firm pressure insert the valves.

Looking from the front of the amplifier, the next valve to plug in is the 5U4G valve which goes into the last valve base at the back of the amplifier.

Inspect the locating pin on the bottom center of the valve and align with the valve base (the locating pin can only go in one way round due to a locating spigot) and with gentle but firm pressure insert the valve.

Looking from the front of the amplifier, the next valves to install are the 300B valves which are inserted into the two 4 pin valve bases in the middle of the amplifier.

It is absolutely vital that these valves are fitted correctly

(1) The larger pins must face the front of the amplifier when fitted to their valve bases.

(2) The sticker on the valve base must also line up with the sticker on the copper top plate, that is, A to A, B to B etc., or 1 to 1, 2 to 2 and so on.

Please make sure that both (1) and (2) are correct and with gentle but firm pressure insert the valves into their sockets.

Check again that all valves are fully inserted in the correct way to their respective valve sockets.

Installation

Select a suitable location for the unit ensuring that adequate ventilation clearance is provided allowing at least 30cm of space above the unit. This is an important consideration as the amplifier generates substantial heat during normal operation. Be sure not to install the amplifier into a cabinet with restricted air flow or onto a thick pile carpet.

In the interest of safe, reliable operation situate the amplifier away from dampness or direct sunlight. Site the unit on a flat and firm surface capable of sustaining the amplifier's weight. Worthwhile sonic improvements may be obtained by locating the amplifier on a purposely designed audio support system.

CONNECTION – Inputs

The amplifier has two RCA sockets on the back panel for connection to your preamplifier marked as Input. The sockets are colour coded Black for Left channel and Red for Right channel.

CONNECTION – Speakers

The amplifier is equipped with three colour coded standard binding posts for each channel for connection to your speakers.

Connect the amplifiers black speaker output binding post marked as “ 0 ” to the black terminal (also marked “ – “) on the speaker.

Connect the amplifiers red speaker output binding post marked “8 Ohm” to the red terminal (also marked “ + “) on the speaker.

The other red speaker output binding post is marked “4 Ohm” and may be used with 4 Ohm speakers. If you are uncertain whether your speaker system is of 4 or 8 Ohm type, try the following test once all other connections are made and the amplifier is operational. Compare the sound quality using a familiar recording with the speakers connected to the 8 ohm connections and then the 4 Ohm connections respectively. The selection that produces the best frequency balance and maximum dynamics should be used.

CONNECTION – Mains

Both amplifiers have an IEC mains inlet socket. Use the supplied mains cable to connect the unit to the local mains supply. The mains fuse and a spare is located in the inlet socket fuse drawer. The mains cable must be removed to access the fuse or fuses.

Special Note – Make sure that all connection are tight and clean. For best results use good quality audio interlinks. Although several companies make good quality interlinks those manufactured by Audio Note give the best performance with Audio Note Amplifiers.

USING THE AMPLIFIER

Once all the connections are completed and checked, turn on the amplifier by using the rocker switch located on the rear top right of the back panel just above mains inlet socket. The amplifier requires approximately two minutes initializing time before it is ready for operation. During this time ensure that the volume control on your preamplifier is at the minimum setting.

A new amplifier requires about 200 hours of initial use (called “bedding in time”) before the circuitry becomes stable and optimum performance is realized. As the amplifier “beds in” the sound will become increasingly smoother, detailed and open. Once the amplifier has “bed in”, a warm up time of approximately 30 to 45 minutes is required each time the amplifiers are switched on before optimum sonic performance is reached.



CAUTION – Valves can reach very high operating temperatures when in use and can cause burns if touched.

AFTER CARE

No special maintenance is required for the amplifier. A small feather or wool duster is excellent for removing household dust from the valves and chassis. Fingerprints and such may be cleaned with a soft cloth. Use a soft cloth dampened in mild, warm and weak soapy solution to remove grease or oily substances. Strong or alcohol based solvents may damage the finish on the amplifier. Dust or clean the amplifiers only when switched off and “cold”.

TUBE REPLACEMENTS

The valves used in the amplifiers should provide at least 6000 hours of operation. These valves are specially selected and carefully matched by Audio Note for use with the Conquerer and should only be replaced with matched pairs.

Please consult your Audio Note dealer should the performance of the amplifiers deteriorate so that arrangements for valve replacements can be made.

WARRANTY AND SERVICING

Audio Note warrants this product free from defects in materials and workmanship for 1 year from original date of purchase from an appointed Audio Note dealer. The valves are warranted for 3 months. In the event that your Audio Note product requires servicing, please contact your Audio Note dealer. If the equipment needs to be shipped, please use the original packaging and include a copy of the sales purchase receipt, with a note explaining in as much detail as possible, the problems that you are experiencing with the unit.

Any modification not authorized by Audio Note will invalidate this warranty.

If you require technical support, new valves or have any questions, please direct them to your Audio Note dealer first or contact us directly.

Audio Note (UK) Limited,
25 Montefiore Road
Hove, East Sussex,
BN3 1RD,
United Kingdom
Tel: +44 (0)1273 220511
Fax: +44 (0)1273 731498
Email: info@audionote.co.uk

SPECIFICATIONS

Weight	20 kg
Dimensions	195(h) x 205(w) x 500(d) mm
Fuse Rating	2A Anti Surge (110V/120VAC Supply) 1.2A Anti Surge (200/240VAC Supply)
Input Impedance	100k Ohm
Input Sensitivity	250mV for full output
Maximum Output	9 watts RMS per channel into 4 or 8 ohm loads
Channel Balance	+/- 0.3db
Valves	2 x 6SN7WGTA, 1 x 5U4G, 2 x 300Bs
Power Consumption	270 VA

Note: Due to Audio Note's desire to continually improve its products, specifications are subject to change without notice.



THIS PRODUCT COMPLIES WITH CE STANDARDS